

## The Lifestyle Dehumidistat Part #99-DH-01

### Key Features

- The Dehumidistat measures the indoor humidity level and will initiate high speed ventilation when the moisture level in the home exceeds the set point on the control.
- Once the humidity in the house is reduced, the HRV will revert back to its previous setting.
- The Dehumidistat should be set to OFF for all season except the heating season.
- Connect to 3 wire 20 gauge low voltage wire.

### Humidity Control

Your HRV will produce a dehumidifying effect when outdoor humidity levels are lower than indoor humidity levels. Never use the dehumidistat feature when outdoor temperatures are above 59 F (15 C).


Note: The indoor humidity level is measured at the control.

### Setting the Dehumidistat

Press and release the DEHUMIDISTAT button until the DEHUMIDISTAT LIGHT is at the desired setting. After 5 seconds the dehumidistat light will either flash or be on continuous.

A flashing light indicates the humidity level is higher than the setting and the unit is operating on high speed ventilation. A continuous light indicates the humidity level is lower than the setting. Refer to the unit's Operation & Installation Manual for instructions on how the Dehumidistat works.

Note - Only 1 dehumidistat should be active on a system.

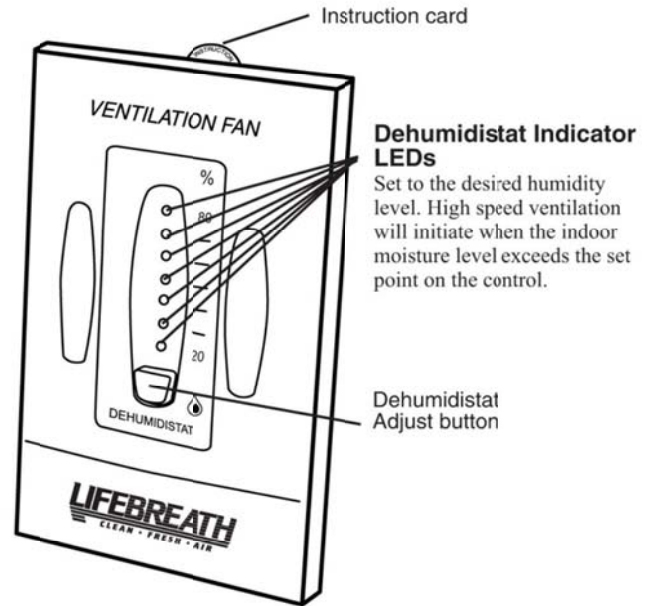

## ATTENTION

If the system does not have a main control installed, the HRV Terminal Block must have a jumper installed between 2 (ON) and 3 (RED). Refer to "Operating the HRV without a Main Control" in this manual.