

## The Lifestyle MAX Programmable Control (Optional)

### Part # 99-LS-01

The optional **Lifestyle MAX Programmable Control** is fully digital and allows you to program when and how much fresh air will be entering your home.

#### Key Features

- 24 / 7 programmable ventilation • 4 programmable events per day
- 5 Speed Fan setting • Electronic Dehumidistat
- Four Selectable Modes of Operation  
20 min. ON / 40 min. off, 20 min. ON / 40 min. recirculate \*  
Continuous Ventilation, Continuous Recirculation \*
- 20 / 40 / 60 High Speed override timer
- Service/Maintenance Reminder display
- Easy to read Backlit LCD screen

#### Setting Date & Time

1. Refresh the screen: use the ON/OFF button to turn the control OFF and ON.
2. Press and release the MODE button until "TIME" and "SET" appear on the screen. Press SET Button.
3. The letter for the day of the week flashes. SCROLL (using Up/Down arrows) to the correct day of the week. Press the SET button.
4. The hour and "AM" or "PM" flashes. SCROLL to the correct hour and press the SET button.
5. The minutes will flash. SCROLL to the correct minute. Press the SET button.


#### Programming Your Control

1. Refresh the screen: use the ON/OFF button to turn the control OFF and ON.
2. Press and release the MODE button until "PROGRAM SET" appears on the screen. Press SET.
3. Weekday letters (MTWTF) will flash. Press SET.
4. "WAKE" flashes. Press SET.
5. "AM" or "PM" flashes. SCROLL to desired time (in 20 minute intervals). Press SET.
6. The "FAN" symbol flashes. SCROLL to the desired fan speed (0-5). Press SET.
7. "VENT", "20/40", "20/40 RECIRC\*", "RECIRC\*", "OFF" will flash. SCROLL to the desired mode of operation. Press SET two times. (Refer to Manual for an explanation of the modes of operation.)
8. "LEAVE" flashes. Press SET. Repeat steps 4 to 6 to program four events per day.
9. "SS" (Saturday & Sunday) flashes. Press SET. Repeat steps 3 to 7 to program the weekend events.

#### Programming Individual Weekday Events

After performing the MTWTF and SS programming functions, you can program individual weekday events.

1. Refresh the screen: use the ON/OFF button to turn the control OFF and ON.
2. Press and release the MODE Button until "PROGRAM SET" appears on the screen. Press SET.
3. Weekday letters (MTWTF) will flash. Scroll to the desired weekday (M,T,W,T,F,S,S). Press SET.
4. "WAKE" flashes. Scroll to the desired event that you want to program as a custom setting ("WAKE", "AWAY", "RETURN" or "SLEEP". Press SET.
5. Either "AM" or "PM" flashes. SCROLL to the desired time (available in 20 minute intervals). Press SET.
6. "FAN" flashes. SCROLL to desired fan speed (0 - 5). Press SET.
7. "VENT", "20/40", "20/40 RECIRC\*", "RECIRC\*" or "OFF" will flash. SCROLL to the desired mode of operation. Press SET. (Refer to Manual for explanation of operational modes.)
8. More weekday events are programmable by pressing SET and repeating steps 4 to 7.

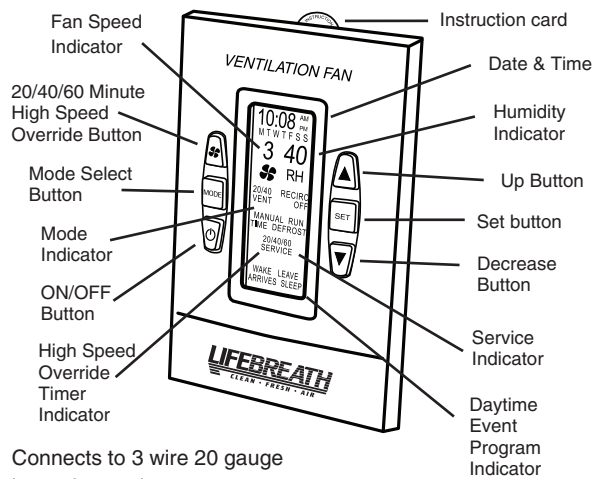

Connects to 3 wire 20 gauge low voltage wire

## ATTENTION

Only one main control can be installed on your system.

#### Running the Program

Upon completion of the programming, you must activate the program.

1. Refresh the screen: use the ON/OFF button to turn the control OFF and ON.
2. Press MODE until the program indicates "PROGRAM" and "RUN".

#### Manually Setting the Control

1. Refresh the screen: use the ON/OFF button to turn the control OFF and ON.
2. Press and release MODE until the program indicates "MANUAL" and "RUN". Press SET.
3. When the FAN symbol flashes, SCROLL (use the Up/Down arrows) to the desired fan speed (0-5). Press SET.
4. VENT, 20/40, 20/40 RECIRC\*, RECIRC\* or OFF will flash. SCROLL to the desired mode of operation. Press SET.

NOTE: The control remains in the "MANUAL RUN" position until you change back to "PROGRAM RUN" (Refer to "Running the Programmed Setting"). \*RECIRC is not available on all models. \*\*Timers will not function when mode of operation is set to "OFF".

#### Setting the Dehumidistat

Refer to "How the Dehumidistat Works" in this manual before setting the Dehumidistat.

1. Refresh the screen: use the ON/OFF button to turn the control OFF and ON.
2. Press and release MODE until "RH" and a number flashes.
3. SCROLL to the desired RH number. Press the MODE.

#### 20/40/60 Minute High Speed Timer

This function temporarily initiates high speed ventilation for 20, 40 or 60 minutes.

1. Refresh the screen: use the ON/OFF button to turn the control OFF and ON.
2. Press the FAN button once for 20, twice for 40 and three times for 60 minutes and four times to cancel the timer.

#### Service Indicator

A 'SERVICE' indicator displays once every 4 months. Refer to "Maintenance Routine" in the Operation & Installation manual.

To reset the service indicator:

1. Refresh the screen: use the ON/OFF button to turn the control OFF and ON.
2. Press and release the Up and Down buttons simultaneously. The "SERVICE" icon will flash for 5 seconds.
3. Press SET within the 5 seconds and the service indicator will reset.